# KSQ333EJD32



- Precision Bus Coupler and Check Synchroniser
- Speed raise/lower relay outputs
- Dead-bus AND Dead-incomer facility
- Integral voltage differential protection, adjustable
- Bi-directional synchronising
- "Easy view" status presentation
- Generator speed reference (analogue output)
- System status output

## **Specifications**

Monitored Voltage Input:	25-500VAC, 40-70Hz
Aux. Supply:	AC: 100-120, 200-240, 380-415, or 440-460VAC, 40-70Hz (Fuse 0,5A) DC: 24, 48 or 110-250VDC (Fuse 2A)
Voltage Tolerance:	± 10%
Contact Rating:	AC: 100VA - 250V/2A max. DC: 50W - 100V/1A max.
Adjustments: Phase angle: Retention time: High voltage: Low voltage: Pulse rate: Pulse width: *Analogue output: *Optional output:	4-30 degrees 100-600mS 2-15% of net voltage 2-15% of net voltage 12-60 pr min 120mS to 1,6secs -10/0/+10mADC = -5/0/+5Hz max 400ohm -3/0/+3VDC (-3/0/+3Hz) min 50kohm *Only active when Sync. mode is selected
Temperature:	-20 to +70℃
Weight:	0.7kgs
Front protection:	IP52 (IP65 optional)

Unit meets IEC60092-504 and relevant environmental and EMC tests specified in IEC60068/60092 and IEC61000/60533 respectively, to comply with Classification Societies requirements.

Megacon is the inventor of the original, now industry standard "rotating" LED display, and a trendsetter in modern synchronisation control.

### Description

KSQ333EJD32 provides both visual speed rotation, phase angle relationship and raise/lower speed relay signals necessary to achieve automatic check synchronising of two different system voltages. When used as a dead-bus or dead-incomer coupler, the CB close relay will energise when either Bus I OR Bus II is "dead" and the enable signal is closed.

KSQ333EJD32 comes with separate auxiliary supply on terminal 19 & 20.

The synchronising relay will close when the incomer (generator, busbar, etc.) voltage and phase angle have been within the limits during the set retention time.

Agreen lamp (CB close) indicates the close command to the breaker.

There is lamp indication for reference source present (BUS I) and incomer status (BUS II).

A green lamp (VOLT OK) is lit when both voltages are within the set limits.

While the generator is running close to synchronising speed the **synch-on-hold** function can inhibit synchronising. This feature allows the operator to determine the moment to enable synchronising. Open link between terminal 7 & 8 to inhibit. LED "CB CLOSE" flashes during inhibit condition.

### **Applications**

KSQ333EJD32 can be used both for single and three phase systems. Any two phases (or phase-neutral) can be used for synchronising as long as it is the same two phases on both side of the breaker.

User settable voltage limits, retention time, phase angle and pulse rate and width on the rear.

The analogue -10/0/+10mA output signal can be used as speed reference to a generator controller, with polarity and amplitude proportional to frequency difference between the two systems.

#### System status:

KSQ333EJD32 is fitted with a system status relay. When power is ok and unit is working correctly the relay activates. It will release on alarm or when unit is not powered.

Normal operation : Closed contact Alarm condition/unpowered : Open contact

www.megacon.com

L AND INSTRUMENTATION

ECTRONIC CONTRO


Norway Denmark United Kingdom



REF: Datasheet.KSQ333EJD32 - REV: 1.07/07.2021 © All rights reserved to Megacon egacon reserves the right to make any changes to the information at any time

## AUTOMATIC BUS COUPLER WITH DEAD BUS/DEAD INCOMER

## KSQ333EJD32

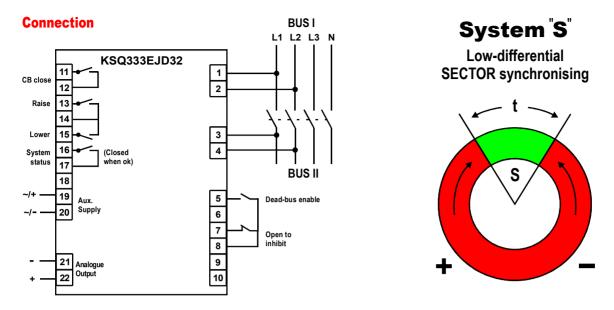

#### **Description**

#### System "S" the sector synchronising principle:

The KSQ333EJD32 is a low differential bi-directional bus coupler synchronising relay. The synchronising relay closes when the incomer (generator, busbar, etc.) frequency is close enough (diff 0,018 - 0,83Hz) to stay within the phase angle sector (S) for the set retention period (t).

Sector synchronisation is the classical alternative for applications which allows synchronisation accuracy and duration of synchronisation process to be interrelated. There is no compensation for the breaker closing time.

Approximate synchronisation accuracy relative to 12 o'clock position (Df) can be calculated by the following formula:

## Df = (S: 360) / t (secs)Example: Set phase angle (S) to 10 degrees and retention time (t) to 500mS to obtain an accuracy of Df: (10/360) / 0,5 = 0,055Hz

If the phase angle limit is set too low and retention time too high for very low differential synchronising, it can be difficult to achieve synchronisation. If there is a continuously fluctuating load between the two systems (for example to synchronise against a shaft generator when a vessel is in rough weather), the KSQ104x2 "SPOT-ON" principle is more suitable.

The "phase angle" setting on the rear of the unit refers to the total phase angle sector (S), centred about 0°. Hence a setting of 10° means the sector spanning from -5° to +5°.

Note: The CB Close LED will flash when unit is ready for synchronising, but inhibit input is open or synchronising mode is not selected.

