



- Precision Generator kW Load Protection, not affected by heavily distorted waveforms
- Available for 3-phase, 3-wire (2W3) or 4-wire (3W4) systems
- Definite time trip delays
- 2-level overload protection (F versions)
- Up to two individual very fast analogue output signals (<50mS), (optional)
- Wide range setting of overload contact hysteresis
- DIN96 Slave Indicator with status LEDs (optional)

## Specifications

Monitored Voltage:	100-120V, 200-240V, 380-415V, 440-460V, 480VAC 40-70Hz (Fuse 0,5A)
Optional Separate Auxiliary Voltage AC:	100-120V, 200-240V, 380-415V, 440-460V, 480VAC 40-70Hz (Fuse 0,5A)
Optional Separate Auxiliary Voltage DC:	12-48VDC (Fuse 0,5A) 110-220VDC (Fuse 1A)
Supply tolerance:	+10%, -20%
Power rating:	5VA
Current Input:	1A CT or 5A CT, <0,1VA
Contact rating:	AC: 100VA -250V/2A max. DC: 50W -100V/1A max.
Adjustments:	Depending on the selected model (see page 2 & 3)
Output kW range:	Any % of the scale
Analogue output 1:	mA: Up to 20mA, max 500R V: Up to 10V, min 100kohm (other on request)
Analogue output 2:	mA: Up to 20mA, max 500R V: Up to 10V, min 5kohm or optional 500ohm (other on request)
(see page 4 for available outputs)	
Accuracy:	Class 0,5
Temperature:	-20 to +70°C
Humidity, relative:	0-95%
Weight:	0.6kgs
Front protection:	IP21
Flammability:	UL94-V0

The unit meets EN 60255-27 Cat. III, Pollution degree 2 and the relevant environmental and EMC tests specified in EN 60255-26 to comply with the requirements of the major Classification Societies.

Related information:

The KCW17x series are also available for panel mounting as KPW17x series.

## Description

The digitally controlled KCW17x range provides precision (1.0%) reverse power and overload protection and monitoring of three phase generators.

The unit measures the voltage and current true r.m.s. value, and accuracy is independent of any wave form distortion.

The standard models takes the auxiliary supply voltage from the monitored voltage (terminal 1 & 2).

It can also be delivered with optional separate AC or DC auxiliary voltage (terminal 26 & 27), but that must be specified when ordering (see page 4 for ordering code for separate Aux. Supply).

User settable trip levels and delays. Colour of LEDs indicate alarm status. Alarm LEDs flash during count-down.

See page 2 & 3 for models with 2 x O/L

LED status			LED status		
Power	O/L	R/P	Power / O/L1	O/L2	R/P
●	●	●	● / ●	●	●
Normal	Alarm	Alarm	Normal / Alarm	Alarm	Alarm

Start of monitoring function is delayed when power is switched on (default 2 secs delay). In this way false tripping during power up is avoided.

The DIN-rail mounted instrument reads the power level directly in kW. The optional slave watt-meter and the triple-zone status LEDs at a glance gives the clear safety message:

- OVERLOAD
- NORMAL
- REVERSE POWER

## OUTPUTS

Up to two individual very fast analogue output signals (optional) proportional to kW range (see page 2 and 3 for models with outputs). This may be used as an input to a control system, to detect abnormal power conditions (loss of excitation etc). If output is used for remote meter reading, we recommend 0-1mA for the slave indicator.

## RELAY OUTPUTS

Relay operation depends on the selected model (see page 2 and 3). Other combinations are available on request.

## Description

### KCW171C / H - KCW176AA / AB - KCW176HA / HB

Reverse power relay (R3) is used to trip the generator breaker. The overload relay (R1) can be used for non-essential load release or as start signal to standby generator etc. A wide range overload hysteresis can be set to enable R1 to be used for non-essential load to be reconnected or as standby generator stop signal.

Relay R2 is intended for notification of a reverse power condition, or can be used for local indication, as input to an alarm system etc. R2 and R3 will latch after trip.

## Relay Operation

The relay operation is delayed in the arrow direction, the reset is instantaneous. Both trip levels can, independently, individually set over the scale range (0-100% FSD).

### Configuration: 3-Phase, 3-Wire (2W3)

### Meter: Bi-Polar 1

Relay	O/L 1	O/L 2	R/P	Fail Safe	Latch	Fixed Hysteresis	Adjustable Hysteresis	N/A	N/A
R1	X								
R2			X		X		X		
R3			X	X	X				

Models	Latch	Output 1	Output 2	Bi-Polar 1	Adjustments	Trip level	Delay
KCW171C	X	-	-		O/L1:	0-100% of FSD	0-30secs
KCW171H	-	-	O/L2:		N/A	N/A	
KCW176AA	X	X	-		R/P:	0-20% of FSD	0-30secs
KCW176AB	X	X	X		Hysteresis:	2-50%	
KCW176HA	-	X	-		Relays shown de-energised. R3 is fail-safe and energises when unit is powered.		

### KCW171F / HF - KCW176FA / FB - KCW176HFA / FB

Reverse power relay (R1) is used to trip the generator breaker. The two individual settable overload relays (R2 and R3) can be used for non-essential load release or as start signal to standby generator etc.

R2 and R3 are non-latching and have a 10% fixed hysteresis.

### Configuration: 3-Phase, 3-Wire (2W3)

### Meter: Bi-Polar 1

Relay	O/L 1	O/L 2	R/P	Fail Safe	Latch	Fixed Hysteresis	Adjustable Hysteresis	N/A	N/A
R1			X	X	X				
R2	X					X			
R3		X				X			

Models	Latch	Output 1	Output 2	Bi-Polar 1	Adjustments	Trip level	Delay
KCW171F	X	-	-		O/L1:	0-100% of FSD	0-30secs
KCW171HF	-	-	-		O/L2:	0-100% of FSD	0-30secs
KCW176FA	X	X	-		R/P:	0-20% of FSD	0-30secs
KCW176FB	X	X	X		Hysteresis:	Fixed 10%	
KCW176HFA	-	X	-		Relays shown de-energised. R1 is fail-safe and energises when unit is powered.		

### KCW172A - KCW178AA / AB

The overload relay (R2) can be used for non-essential load release or as start signal to standby generator etc. A wide range adjustment for overload contact hysteresis can be set to enable R2 to be used for non-essential load to be reconnected or as standby generator stop signal.

Reverse overload relay (R1 & R3) is reverse over load protection when generator is running as motor. Reverse power relays can be used for generator trip, local indication, alarm system etc.

### Configuration: 3-Phase, 3-Wire (2W3)

### Meter: Bi-Polar 2

Relay	O/L 1	O/L 2	R/P	Fail Safe	Latch	Fixed Hysteresis	Adjustable Hysteresis	N/A	N/A
R1			X						
R2	X						X		
R3			X						

Models	Latch	Output 1	Output 2	Bi-Polar 2	Adjustments	Trip level	Delay
KCW172A	-	-	-		O/L1:	0-100% of FSD	0-30secs
KCW178AA	-	X	-		O/L2:	N/A	N/A
KCW178AB	-	X	X		R/P:	0-100% of FSD	0-30secs

### KCW172B - KCW178BA / BB

The overload relay (R2) can be used for non-essential load release or as start signal to standby generator etc. A wide range adjustment for overload contact hysteresis can be set to enable R2 to be used for non-essential load to be reconnected or as standby generator stop signal.

Reverse overload relay (R1 & R3 with different setting range) is reverse over load protection when generator is running as motor. Reverse power relays can be used for generator trip, local indication, alarm system etc.

### Configuration: 3-Phase, 3-Wire (2W3)

### Meter: Bi-Polar 2

Relay	O/L 1	R/P 1	R/P 2	Fail Safe	Latch	Fixed Hysteresis	Adjustable Hysteresis	N/A	N/A
R1		X		X					
R2	X					X			
R3			X			X			

Models	Latch	Output 1	Output 2	Bi-Polar 2	Adjustments	Trip level	Delay
KCW172B	-	-	-		O/L1:	0-100% of FSD	0-30secs
KCW178BA	-	X	-		R/P1:	0-20% of FSD	0-30secs
KCW178BB	-	X	X		R/P2:	0-100% of FSD	0-30secs

The MEGACON policy is one of continuous improvement, consequently equipment supplied may vary in detail from this publication.

Depending on application, select the model that matches the electrical installation. If none of the listed models fit your purpose please contact Megacon for customer adaptation.



## Description

### KCW174C / H - KCW177AA / AB - KCW177HA / HB

Reverse power relay (R3) is used to trip the generator breaker. The overload relay (R1) can be used for non-essential load release or as start signal to standby generator etc. A wide range overload hysteresis can be set to enable R1 to be used for non-essential load to be reconnected or as standby generator stop signal.

Relay R2 is intended for notification of a reverse power condition, or can be used for local indication, as input to an alarm system etc. R2 and R3 will latch

## Relay Operation

The relay operation is delayed in the arrow direction, the reset is instantaneous. Both trip levels can, independently, individually set over the scale range (0-100% FSD).

### Configuration: 3-Phase, 4-Wire (3W4)

### Meter: Bi-Polar 1

Relay	O/L 1	O/L 2	R/P	Fail Safe	Latch	Fixed Hysteresis	Adjustable Hysteresis	N/A	N/A
R1	X								
R2			X		X		X		
R3			X	X	X				

Models	Latch	Output 1	Output 2	Bi-Polar 1	Adjustments	Trip level	Delay
KCW174C	X	-	-		O/L1:	0-100% of FSD	0-30secs
KCW174H	-	-	O/L2:		N/A	N/A	
KCW177AA	X	X	-		R/P:	0-20% of FSD	0-30secs
KCW177AB	X	X	X		Hysteresis:	2-50%	
KCW177HA	-	X	-		Relays shown de-energised. R3 is fail-safe and energises when unit is powered.		
KCW177HB	-	X	X				

### KCW174F / HF - KCW177FA / FB - KCW177HFA / FB

Reverse power relay (R1) is used to trip the generator breaker. The two individual settable overload relays (R2 and R3) can be used for non-essential load release or as start signal to standby generator etc.

R2 and R3 are non-latching and have a 10% fixed hysteresis.

### Configuration: 3-Phase, 4-Wire (3W4)

### Meter: Bi-Polar 1

Relay	O/L 1	O/L 2	R/P	Fail Safe	Latch	Fixed Hysteresis	Adjustable Hysteresis	N/A	N/A
R1			X	X	X				
R2	X					X			
R3		X				X			

Models	Latch	Output 1	Output 2	Bi-Polar 1	Adjustments	Trip level	Delay
KCW174F	X	-	-		O/L1:	0-100% of FSD	0-30secs
KCW174HF	-	-	-		O/L2:	0-100% of FSD	0-30secs
KCW177FA	X	X	-		R/P:	0-20% of FSD	0-30secs
KCW177FB	X	X	X		Hysteresis:	Fixed 10%	
KCW177HFA	-	X	-		Relays shown de-energised. R1 is fail-safe and energises when unit is powered.		
KCW177HFB	-	X	X				

### KCW175A - KCW179AA / AB

The overload relay (R2) can be used for non-essential load release or as start signal to standby generator etc. A wide range adjustment for overload contact hysteresis can be set to enable R2 to be used for non-essential load to be reconnected or as standby generator stop signal.

Reverse overload relay (R1 & R3) is reverse over load protection when generator is running as motor. Reverse power relays can be used for generator trip, local indication, alarm system etc.

### Configuration: 3-Phase, 4-Wire (3W4)

### Meter: Bi-Polar 2

Relay	O/L 1	O/L 2	R/P	Fail Safe	Latch	Fixed Hysteresis	Adjustable Hysteresis	N/A	N/A
R1			X						
R2	X						X		
R3			X						

Models	Latch	Output 1	Output 2	Bi-Polar 2	Adjustments	Trip level	Delay
KCW175A	-	-	-		O/L1:	0-100% of FSD	0-30secs
KCW179AA	-	X	-		O/L2:	N/A	N/A
KCW179AB	-	X	X		R/P:	0-100% of FSD	0-30secs
					Hysteresis:	2-50%	
					Relays shown de-energised.		

### KCW175B - KCW179BA / BB

The overload relay (R2) can be used for non-essential load release or as start signal to standby generator etc. A wide range adjustment for overload contact hysteresis can be set to enable R2 to be used for non-essential load to be reconnected or as standby generator stop signal.

Reverse overload relay (R1 & R3 with different setting range) is reverse over load protection when generator is running as motor. Reverse power relays can be used for generator trip, local indication, alarm system etc.

### Configuration: 3-Phase, 4-Wire (3W4)

### Meter: Bi-Polar 2

Relay	O/L 1	R/P 1	R/P 2	Fail Safe	Latch	Fixed Hysteresis	Adjustable Hysteresis	N/A	N/A
R1		X		X					
R2	X					X			
R3			X			X			

Models	Latch	Output 1	Output 2	Bi-Polar 2	Adjustments	Trip level	Delay
KCW175B	-	-	-		O/L1:	0-100% of FSD	0-30secs
KCW179BA	-	X	-		R/P1:	0-20% of FSD	0-30secs
KCW179BB	-	X	X		R/P2:	0-100% of FSD	0-30secs
					Hysteresis:	Fixed 2%	
					Relays shown de-energised. R1 is fail-safe and energises when unit is powered.		


The MEGACON policy is one of continuous improvement, consequently equipment supplied may vary in detail from this publication.

Depending on application, select the model that matches the electrical installation. If none of the listed models fit your purpose please contact Megacon for customer adaptation.




## Connection Diagram

### Connection Diagram without optional slave instrument

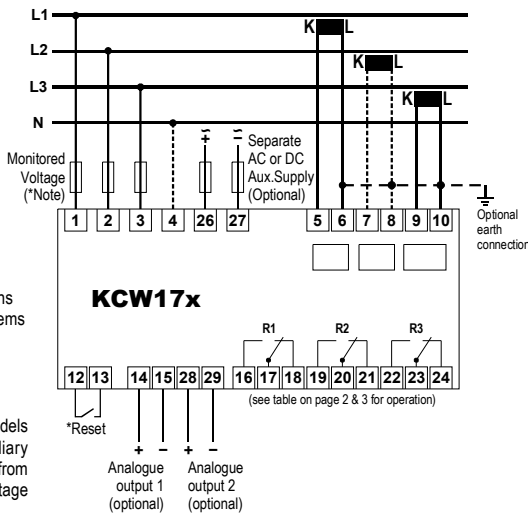

### Connection Diagram with optional slave instrument

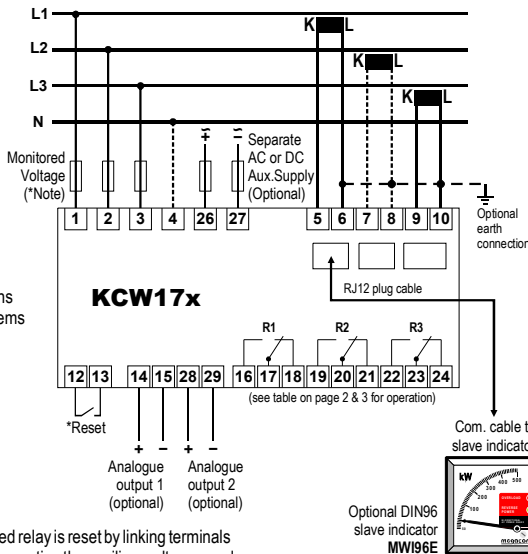

## Analogue Output

The output signals are proportional to the meter reading (see page 2 & 3 for an overview of models and functions).

The signal is specifically intended as an input to a control system for monitoring or control.

Add suffix from table below to type designation to specify output required:

### Outputs 1

O/P1	0 - 10mA
O/P2	0 - 20mA
O/P3	4 - 20mA
O/P4	4 - 12 - 20mA
O/P5	4 - 5,45 - 20mA
O/P6	-10 - 0 - +10mA
O/P7	-20 - 0 - +20mA
O/P8	0 - 10V
O/P9	0,2 - 10V
O/P10	4,3 - 20mA

### Outputs 2

O/P11	0 - 10mA
O/P12	0 - 20mA
O/P13	4 - 20mA
O/P14	4 - 12 - 20mA
O/P15	4 - 5,45 - 20mA
O/P16	-10 - 0 - +10mA
O/P17	-20 - 0 - +20mA
O/P18	0 - 10V
O/P19	0,2 - 10V
O/P20	4,3 - 20mA

## Relay Contacts

Burden on supply	: 170mW per relay
Switching voltage (Max)	: 400V AC, 300V DC
Switching voltage (Rated)	: 250V AC, 30V DC
Max I continuous	: 6A RMS, 6A DC
Max breaking capacity	: 1500VA AC, 18-120W DC
Dielectric strength across Open contacts	: 1000V RMS


## Connection

Terminal type	: Terminal Clamp and Screw
Wire max.	: T1-T4, T5-T10: AWG 24-14, other terminals: AWG 24-12
Screw Torque	: 0.5Nm

## Overload

Voltage	: 1.2 x Un continuous 2 x Un for 10secs
Current	: 2.5 x In continuous 5 x In for 1secs (max 25A)

## Dimensions

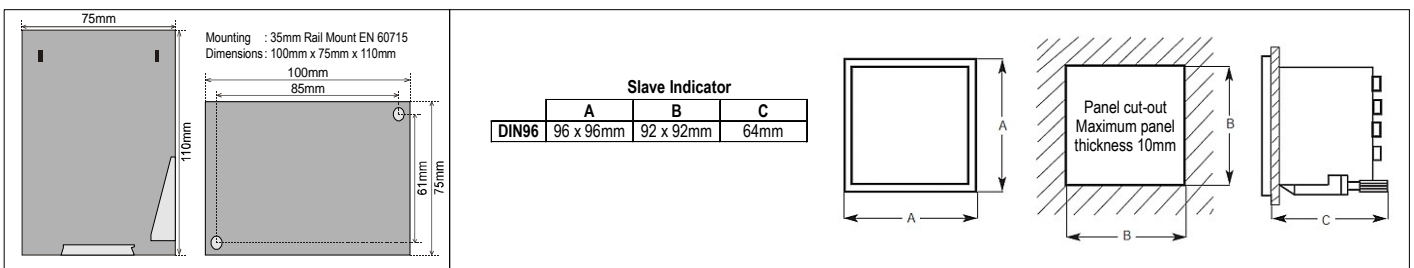

The MEGACON policy is one of continuous improvement, consequently equipment supplied may vary in detail from this publication.

### ORDERING INFORMATION (Example)

Type	: KCW176AB
Aux. Supply	: 200-240VAC
Input Voltage	: 230V
Input Current C.T.	: 1500/5A
Range	: -60/0/+600kW
Analogue output 1	: O/P3: 4-20mA
Analogue output 2	: O/P18: 0-10VDC

### Optional Separate Aux. Supply:

Add **-SA** for models with Separate AC Aux. Supply. (Example: KCW176AB-SA)

Add **-SD** for models with Separate DC Aux. Supply. (Example: KCW176AB-SD)

